


Abutments set back from channel and bank

Access track surface

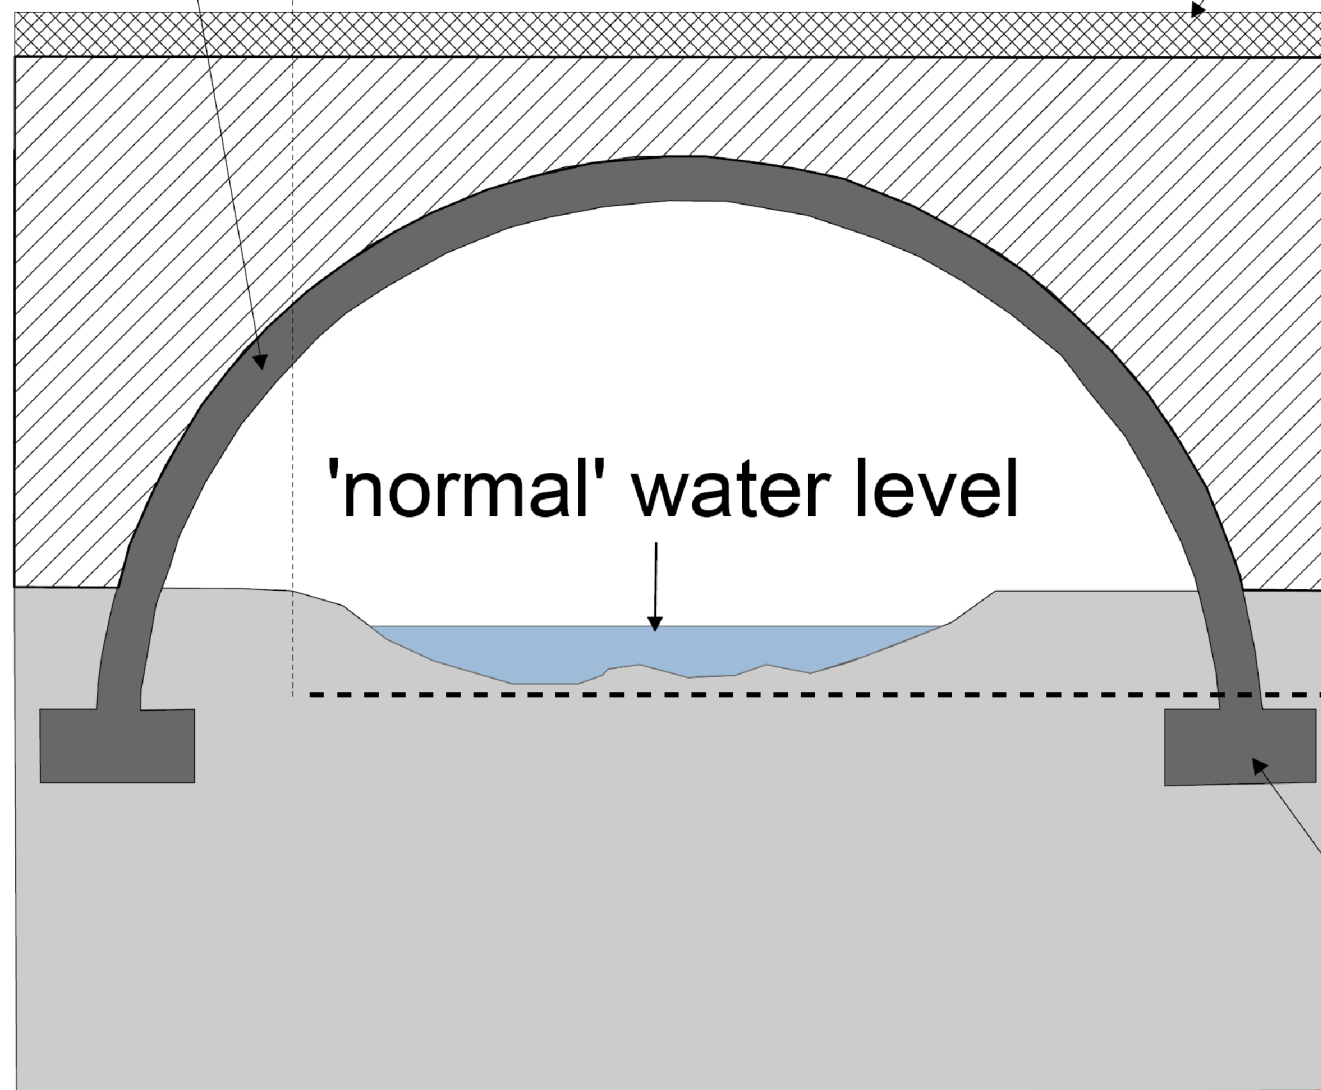

Foundations buried below bed level


KEY

Notes:

Pre-cast arch culvert showing set back abutments and deep foundations

Drawing adapted from SEPA (2008) Engineering in the Water Environment Good Practice Guide - Construction of River Crossings.

Do not scale from this drawing

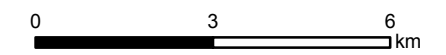

Scale 1:128,000 @ A3



Sandy Knowe Wind Farm
EIA Report

Figure 3.7
Indicative Section Drawing of Bottomless Culvert

Date: 09/07/2018	Drawn by: RT	Checked by: AR	Version: V1
------------------	--------------	----------------	-------------